microlab

microlab

Art For The Ear

M-930
User Manual

All other brand and product names are trademarks of their respective holders. Actual contents may differ slightly from those shown in print. All specifications and designs are subjected to changes without any prior notice.

High Performance Sound

Prior to first use, please read the manual carefully

Important Safety Instructions

Caution:
To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

Explanation of Graphical Symbols:

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and

WARNINGS:

1. Read Instructions - All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be kept product for future reference.
3. Heed warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions - All operating and use instructions should be followed.
5. Installation - Install in accordance with the manufacturer's instructions.
6. Power sources - This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Grounding or polarisation - the product is not required to be grounded. Ensure the plug is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure. Some versions of the product are equipped with a power cord fitted with a polarized alternating line plug (a plug having one blade wide than the other). This plug will fit onto the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarised plug. When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance ,it should be fitted with the appropriate moulded-on plugs and carry safety approval appropriate to the country of use.
8. Power cord protection - Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the appliance.
9. Overloading - Do not overload wall outlets, extension cords or multiple sockets, as this can result in a risk of fire or electric shock.
10. Ventilation - The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc.
11. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products) including amplifiers that produce heat.No naked flame sources,such as lighted candles, should be placed on the apparatus.
12. Water and moisture - To reduce the risk of fire or electric shock, do not expose the product to train, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near waterfor example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
13. Object and Liquid Entry - Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. Cleaning - Unplug the product from the wall outlet before cleaning. The cabinet of the subwoofer may be cleaned by dusting with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.
15. Attachments - Do not use attachments not recommended by the product manufactures, as they may cause hazards.
16. Accessories - Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
17. Moving the product - A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
18. Unuse periods - The power cord of the appliance should be unplugged from the outlet during lightning storms or when the

TroubleShooting

Frequently Asked Questions	Answers
Power LED won't light up	Check if the system is powered on
	Check the power plug well connected
No Sound	Check if the audio source is working well
	Check if the audio and speaker cables well connected
	Check if the volume at right level
One or more satellite no sound	Check if the satellite cable well connected
Static sound heard when volume knob is turned	Turn off the playback source first, then turn the speaker volume knob several times. Playback again and monitor. The static noise is due to dust, so simply turning the volume will remove it easily.
What are the products supported?	Any playback devices such as PC, Media Players with 3.5mm stereo plug.
Sound is distorted	Check if the volume at lower level
Where to place this speaker	It is magnetically shielded so can be placed near LCD TV Monitor without any distortion
If the problem still exists, please contact the distributor or ask for professional service	

Technical Information

Features

- Hi-Fi quality 2.1 speaker system with amplifier for producing near theater effects in your own room or favourite couch
- 30 Watt of pure acoustic power with 5" subwoofer and 2 x 2.5" satellites. Full audio spectrum performances, ideal for your favourite entertainment on Mp3, Mp4, CD/DVD movies and digital playbacks
- Specially designed subwoofer with Microlabs X-Bass technology on the subwoofer produces deep bass and resolution
- Wooden cabinets for ideal sound dynamics and acoustic excellence
- Comes with 2 input options: 3.5mm stereo and RCA connections
- Magnetically shielded satellites for safe positioning near TV or LCD monitors with interference free use

Specifications

Amplifier:	
Output power	30 Watt
Speaker	
Subwoofer	16 Watt
Satellites	7 Watt x 2
AC power	220V - 240V ~ 50Hz 140mA
Speaker unit:	
Subwoofer	5" driver
Satellites	2.5" magnetically shielded drivers
Product dimension (W x H x D):	
Subwoofer	201 x 381 x 413mm
Satellites	95 x 149 x 99mm
Weight	5.9kg

19. Servicing - Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Please remove the power plug form the main power source or wall power source when not in use. When plugged in to a power source, the system is in standby mode, so the power is not entirely cut off.
21. Replacement parts - When replacement parts are required, ensure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
22. Mains fuses - For continued protection against fire hazard, use fuses only of the correct type and rating. The correct fuse specification for each voltage range is marked on the product.
23. Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.
24. The only means of completely disconnecting the product from the power supply is by removing the power cord from the wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at all times while the product is in use.
25. Try to install the product near a wall socket or exetension cord and shall be easily accessible.
26. The highest environmental temperature suitable for this product is 40°C.

Unpacking the giftbox

Unpacking:

- Fold the carton flaps right back and invert the carton and contents.
- Lift the carton clear of the contents.
- Remove the inner packing from the product.

☺ We suggest you retain the packing for future use.

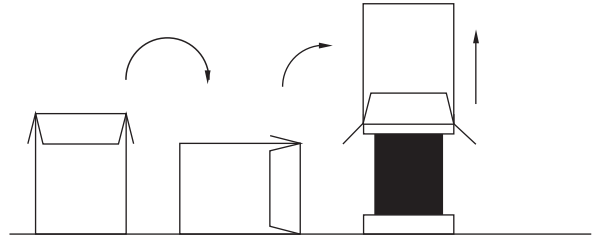

Package contents

Subwoofer amplifier	1pc
Satellite speakers	2pcs
Remote control	1pc
Batteries	2pcs
3.5mm - 2 x RCA signal cables	1pc
User manual	1pc

Function Instruction

Front Panel (Illustration 1)

Front panel controls
1. LED display window and remote control infrared sensor
2. INPUT selection button
3. Master volume knob (Note: Master volume can be controlled from this knob or the remote control)

Remote Control (Illustration 3)

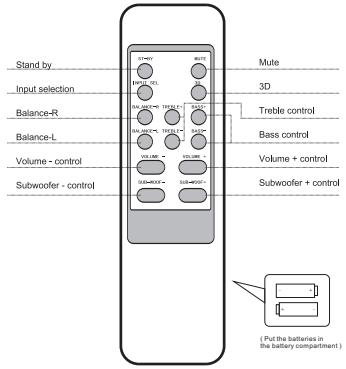

Connection (Drawing 3)

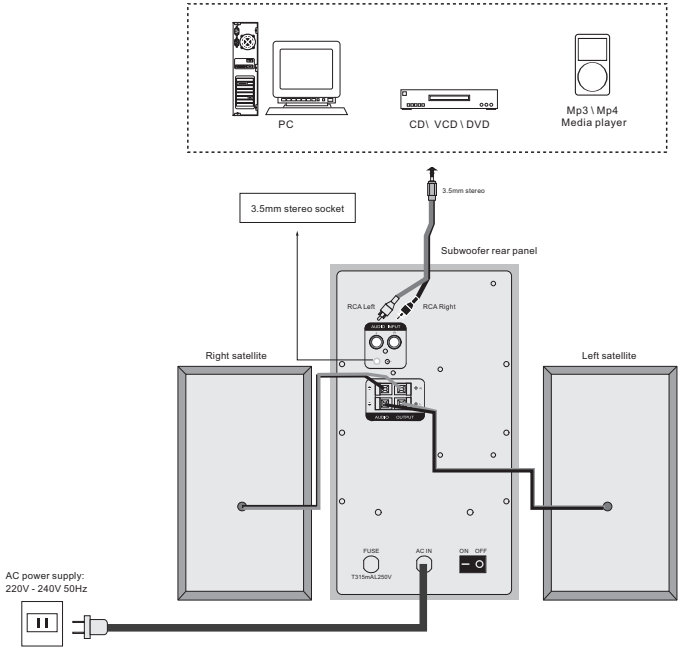

System Connection

Operation

1. Plug the AC power plug to the wall AC source or any AC power distribution sockets.
2. Ensure the volume level is lowered to zero.
3. Turn on the power switch on the rear panel of the subwoofer to put the system to standby (ST-BY) mode with its LED illuminated.
4. Next, turn the master volume knob to turn ON the system.
5. Depress the INPUT SEL button to select the audio inputs between INPUT1 and INPUT2. The INPUT SEL button is located on the Subwoofer front panel or the remote control. Note: the remote control have duplicated button functions as the Subwoofer front panel.

INSTALLATION

Precaution: Prior to connecting the speakers, ensure the AC power plug is removed from the AC source. Secondly, ensure the volume knob is set to zero.

1. Connect the satellite speaker cables to the Left (L) and Right (R) audio outputs at the rear panel of the Subwoofer. Next, position the left channel satellite on the left of the Subwoofer and the right channel satellite on the right side of the Subwoofer.
2. Connecting the playback source (VCD, DVD, CD player) to the speaker systems with the included audio cable (3.5mm stereo - 2 x RCAs). Plug the 2 x RCA plugs to left and right channel RCAs on the playback source such as VCD, DVD, or CD player. Next plug the 3.5mm stereo plug to the Input socket(INPUT2) at the rear panel of the Subwoofer. Alternatively, you can purchase a 2 x RCA - 2 x RCA cable for a second playback source and connect to INPUT1 at the rear panel of the Subwoofer.
3. Connecting to a PC (alternative), use the 3.5mm - 2 x RCA audio cable. Plug the 3.5mm stereo connector to the computer's soundcard or the audio output socket (green coloured: 3.5mm stereo socket) of of the PC. Next, plug the 2 x RCA to the INPUT1 socket at the rear panel of the Subwoofer.
4. Ensure all plugs are seated properly and the AC power supply is properly connected. Please always ensure the AC power ratings printed on the rear panel of the Subwoofer tally with your country's AC power supply ratings. If they do not match, please do not connect and turn ON the power. This will

SPEAKER POSITIONING

For ideal stereophonic effects, we recommend the stereo speakers or satellites be placed approximately 70cm apart and about 50cm to 100 cm away from the listener. The best listening position is to sit in the middle of the two satellite speakers. There are no special requirements on the Subwoofer placement, it can be place in position in the room. Subwoofer handles the bass and depth, the low frequency range has no directional effect on our ears.